# **DataQuake™**


Quick Reference Guide





# **Getting Started**


The DataQuake<sup>™</sup> module provides removable storage space, vibrating alert (like a pager) and a bright flashing LED alert for Handspring<sup>™</sup> handheld computers. To install, remove the slot protector and insert the module in the expansion slot until the connectors are secure.

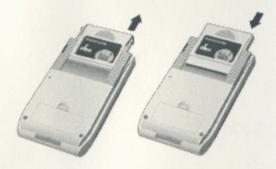

The DataQuake includes File Mover software, alert configuration and alert test software already pre-loaded on the module. The File Mover software lets you copy, move or delete applications and data on the handheld and the module. The configuration software allows you to shut off audible alerts (including those from the To Do List or the Date Book) and redirect them to either the internal vibrator or flashing LED lamp. The test software allows you to test and alter alerts. When the module is inserted, it will display the configuration screen and will also install a new icon for each of these applications in the Application Launcher.

# File Mover application

The File Mover icon will appear along with a bullet point next to any extra applications that are loaded on the module. This includes the File Mover application but excludes the Configuration and Test applications.

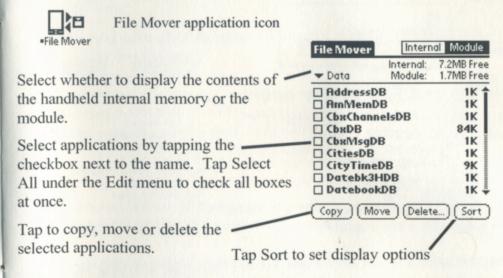

Built-in applications such as the Date Book are not displayed in the Apps view because they cannot be moved or deleted. When you delete or move an application you leave behind its data files. (This is different than the Applications Launcher that deletes all associated files automatically).

#### Menu Items

Tap Edit Module Label under the Options menu to assign a name to the DataQuake module. The Format Module command in the Options menu erases all data on the module. Tap here to enter the Edit and Options

Menus 8

#### Advanced File Mover users

Tap here to choose whether to display applications, data files or both.

This icon indicates that the application is locked or not in the location being viewed.

Quotation marks indicate that an application for a data file is not available.

File Mover	Internal Module	
▼ All	Internal: Module:	7.4MB Free 1.7MB Free
☐ MailDB	V B B	4K - 4K 6K 22K 1 1K - 1K +
Copy Mo	ve Delet	e Sort

**Important:** You can store a data file like your Address Book records on the module, but when you edit addresses, only the data in your local Visor™ memory will be modified. In other words, data files on the module can only be used as backup files. Note: While most applications will run correctly from the module, some applications may need to be updated by the application vendor.

## **Configuration application**

Tap the DQ Config icon to select what type of alert your handheld will give you.




DQ Config application icon

Enable or disable all of the enhanced alert features by tapping here.

Select the type of event that you want to send to the card by tapping the check box.

Pick the type of alert you want a selected event to give you by tapping the box next to the selected name.

Select how hard you want the vibrator and LED to start by tapping the appropriate box.

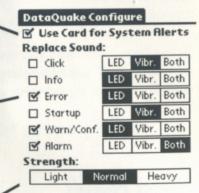


### **Test application**

Tap the DQ Test icon to test how alerts perform.



DQ Test application icon

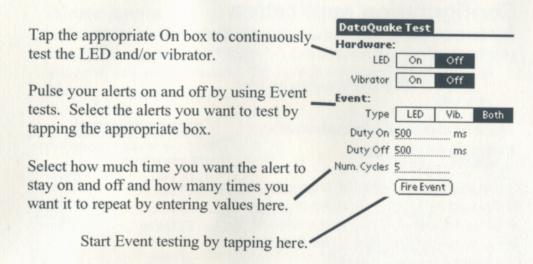

## **Need Help?**

You can reach our Technical Support department at:

Email: support@pogoproducts.com

Internet: www.pogoproducts.com

Copyright © 2001 PoGo! Products, Inc.; All rights are reserved. PoGo! Products, Inc. and the PoGo! Products, Inc. and DataQuake logo are all trademarks of PoGo! Products, Inc. Handspring, Springboard, Visor and the Springboard and Handspring Logo are trademarks of Handspring, Inc. All other trademarks are the property of their respective owners.

October 2001